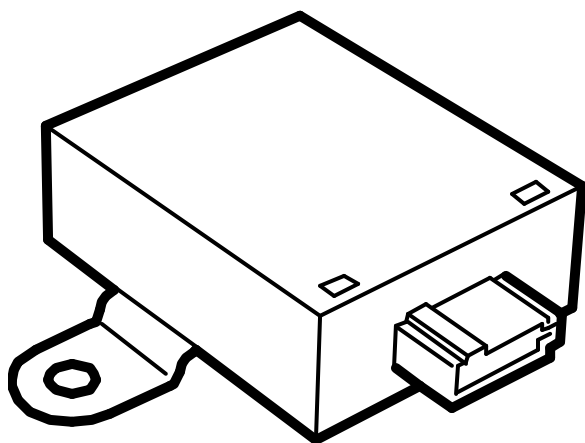


Tilt sensor

E383S008

Location		Under right-hand front seat, screwed to floor
Type		Fluid-filled
Power supply B+	Pin No.	1
Communication	Pin No.	3
Ground	Pin No.	4