

Warning labels



Drive belt

Danger! Moving belt



Radiator fan

The radiator fan can cut in even after engine has been switched off.




Brake fluid

CLEAN FILLER CAP BEFORE REMOVING. USE ONLY DOT 4 FLUID FROM SEALED CONTAINER.



- NO SMOKING
- AVOID SPARKS AND NAKED FLAMES
- KEEP OUT OF REACH OF CHILDREN
- SEE OWNER'S MANUAL
- WEAR EYE PROTECTION
- FLAMMABLE GAS
- ACID

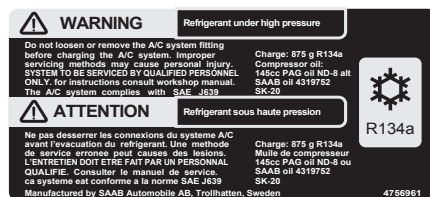

A/C system

Refrigerant at high pressure.

Always drain the A/C system before undoing any connections. Failure to follow prescribed procedures can result in injury. **System to be serviced by authorized personnel only.** See Workshop Service Manual for correct procedures.

The A/C system complies with SAE J639.

Refrigerant: 875 g of R134a.

Refrigeration oil: 145 cc of PAG ND-8 oil or Saab 4319752 SK 20 oil

Battery

Contains corrosive sulfuric acid (40%)

- FLAMMABLE GASES formed when car running and during charging of battery
- Always wear eye protection when working on the battery
- Smoking, open flames and sparks can all cause battery to explode
- See Owner's Manual before using jump leads
- Battery acid can cause SERIOUS BURNS
- Keep battery upright
- Avoid contact with eyes, skin and clothing
- If contact made with acid, flush affected area with water and seek medical help

KEEP OUT OF REACH OF CHILDREN



CANADA

IB1105




USA

**AIR BAG
WARNING**
Flip visor over



CANADA

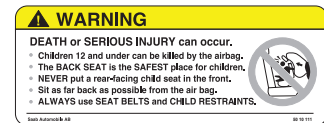


USA

WARNING**DEATH or SERIOUS INJURY can occur.**

- Children 12 and under can be killed by the air bag.
- The BACK SEAT is the SAFEST place for children.
- NEVER put a rear-facing child seat in the front.
- Sit as far back as possible from the air bag.
- ALWAYS use SEAT BELTS and CHILD RESTRAINTS.

**Door mirrors**

Do not trap your fingers when folding out the mirrors

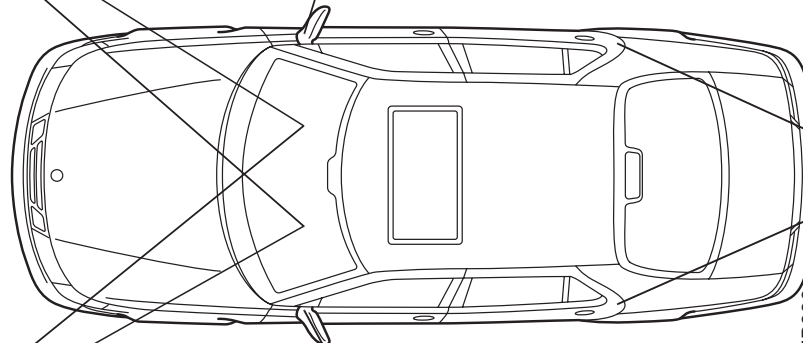**Child security lock**

Locked.

The door can only be opened from outside.

WL26

**Safety catch (9-5 Wagon)**

Locked

The tailgate cannot be opened from the inside.

Long loads

Always **SECURE LOAD** to prevent it from shifting during transport.

An unsecured load could cause passenger injuries in braking situations or in the event of a collision.

Cover sharp edges with a protective wrap.

Max. weight: 33 lbs. (15 kg)

Max. length: 6' 6 inches (2 m)

See your Owner's Manual before securing loads.

⚠ WARNING LONG LOAD

Always **SECURE LOAD** to prevent it from shifting during transport.
An unsecured load could cause passenger injuries in braking situations or in the event of a collision.

Cover sharp edges with a protective wrap.

- Max weight 15 kg (33 pounds)
- Max length 2 m (6 feet 6 inches)

See your Owners Manual before securing loads.

⚠ ATTENTION LONGUE CHARGE


FIXEZ soigneusement LA CHARGE afin d'éviter un mouvement pendant le transport.
Un charge mal fixé risque d'entraîner des dommages corporels lors d'un freinage brusque ou lors d'un accident.

Munissez les arêtes vives d'une protection.

- Poids max. 15 kg
- Longueur max. 2m

Voir le manuel d'instruction avant de fixer la charge.

IB989

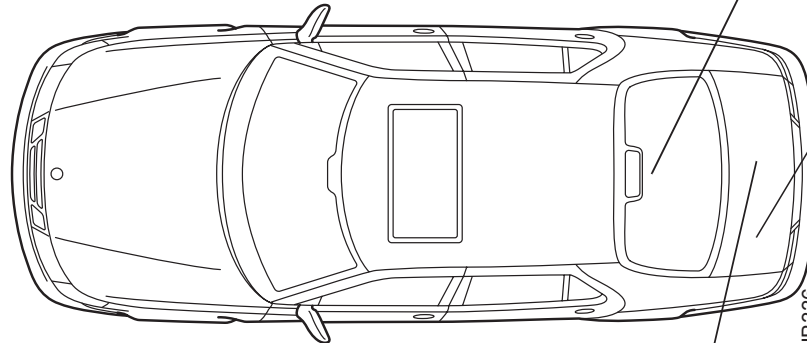

⚠ WARNING

Use on Saab 9-5 & 9-3. Use on level ground only. Use vehicle support stands. Safe working load 1000kg. For more information see your owners manual, Saab Automobile AB

+9 07 747 IB994

Jack (Text printed on jack)

Use on Saab 9-5 & 9-3. Use on level ground only. Use vehicle support stands. Safe working load 2000 lbs. (1,000 kg). For more information see your owner's manual.

⚠ WARNING

- Jack is designed only for changing a tire or mounting tire snow chains.
- Car must be level and jack must be placed on firm and level ground.
- Never crawl underneath car when it is jacking up.

JACKING INSTRUCTIONS

- 1 Set parking brake and shift transmission into park.
- 2 Fit top of jack into jacking point next to wheel to be changed (See illustrations).
- 3 Crank jack so that car begins to lift.
- 4 Remove center cap by inserting a screw driver under cap and prying up.
- 5 Using socket wrench in tool kit, Loosen wheel bolts one-half turn.
- 6 Raise car so that tire clears ground. Loosen wheel bolts completely and remove wheel.
- 7 Mount spare wheel and tighten bolts enough so wheel is not loose.
- 8 Lower car. Tighten wheel bolts in crosswise order (See illustrations).

46 89 949 IB963

Jack

– Jack is designed only for changing a tire or mounting tire snow chains.

– Car must be level and jack must be placed on firm and level ground.

– Never crawl underneath car when it is jacked up.

JACKING INSTRUCTIONS

- 1 Set parking brake and shift transmission to park.
- 2 Fit top of jack into jacking point next to wheel to be changed (See illustrations).
- 3 Crank jack so that car begins to lift.
- 4 Remove center cap by inserting a screw driver under cap and prying up.
- 5 Using socket wrench in tool kit, loosen wheel bolts one-half turn.
- 6 Raise car so that tire clears ground. Loosen wheel bolts completely and remove wheel.
- 7 Mount spare wheel and tighten bolts enough so wheel is not loose.
- 8 Lower car. Tighten wheel bolts in crosswise order (See illustrations).