


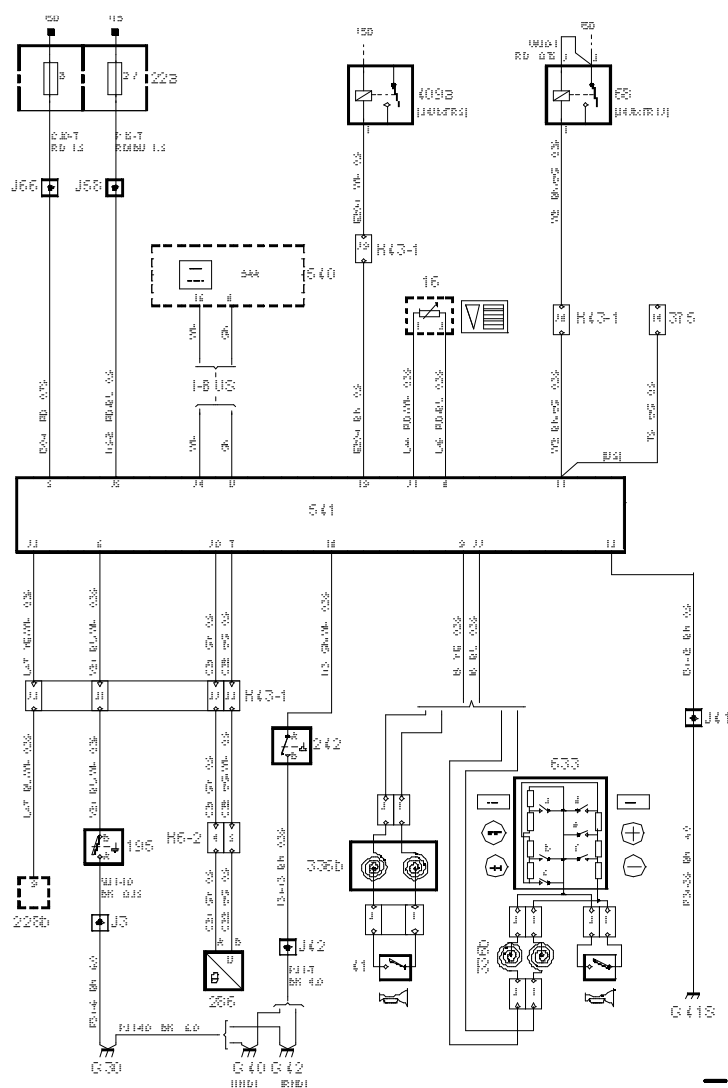









SID



List of components

No.	Name Location:	Illus.
Components		
16	Rheostat, instrument lighting in light switch panel between steering wheel and driver's door	
22a	Main fuse board, dashboard on end of dashboard next to driver's door	
41	Horn button in steering wheel rim	
68	Relay, horn on main relay board in engine bay	
195	Level switch, washer fluid in washer fluid reservoir in LH front wheel housing	
228b	Filament monitor, front lamps on main relay board in engine bay	
242	Level switch, coolant in coolant expansion tank	
286	Ambient air temperature sensor, in centre of spoiler	
336b	Contact unit, steering wheel horn/switches in steering wheel behind crash pad	
375	Connection, mobile telephone	

by radio console

409a	Relay, parking heater on main relay board in engine bay	➔
540	Main instrument unit in front of driver in dashboard	➔
541	SID In the centre of the dashboard	➔
633	Steering wheel switch unit on steering wheel rim	➔
633a	Switch, preset radio tuning/cassette direction/CD to left on steering wheel rim	
633b	Switch, seek forward to left on steering wheel rim	
633c	Switch, seek backward to left on steering wheel rim	
633d	Switch, select radio/tape/CD to right on steering wheel rim	
633e	Switch, increase volume to right on steering wheel rim	
633f	Switch, decrease volume to right on steering wheel rim	

6-pin connector

H6-2	behind the RH headlamp	➔
------	------------------------	---




43-pin connector

H43-1	White connector in connector bracket under LH A-pillar	➔
-------	--	---

Crimp connections

J3	Approx. 100 mm from grounding point G30 branching point towards the radiator fan	➔
J41	LHD: Approx. 200 mm from branching of SID towards MIU RHD: Approx. 90 mm from branching of grounding point G41S towards MIU	➔
J42	LHD: Approx. 130 mm from branching of grounding point G40 to main fuse box RHD: Approx. 50 mm from branching of grounding point G42 towards relay box	➔
J58	LHD: Approx. 50 mm from branching of MIU towards DICE control module RHD: Approx. 260 mm from rear edge of DICE control module connector towards the engine bay	➔
J66	LHD: Approx. 270 mm from branching of MIU towards DICE control module RHD: Approx. 180 mm from branching of MIU towards DICE control module	➔

Grounding points

G30	In engine bay on side plate in front of left wheel housing	
G40	In cabin on LH side of knee member	
G41S	LH ground screw on centre of knee member (in cabin)	
G42	In cabin on RH side of knee member	