
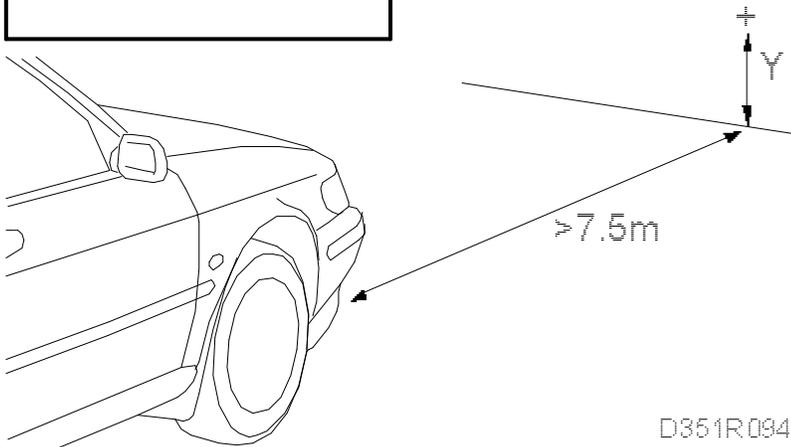



Fog light adjustment

1. Measure the distance between the centre of the lens and the floor. Mark the wall (at 90° to the lens) with a cross at the same height.

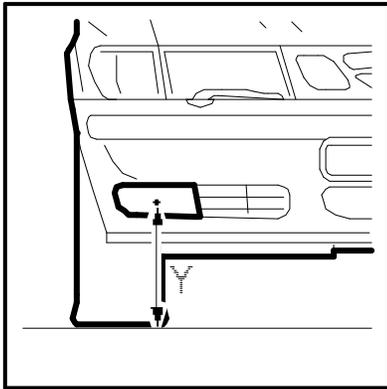

2. Switch on the fog lights.
- 3.

Turn the adjusting screw until the light is below the cross by approximately 1-2% of the distance between the car and the wall (e.g. 10-20 cm under the cross if the distance between the car and the wall is 10 m).

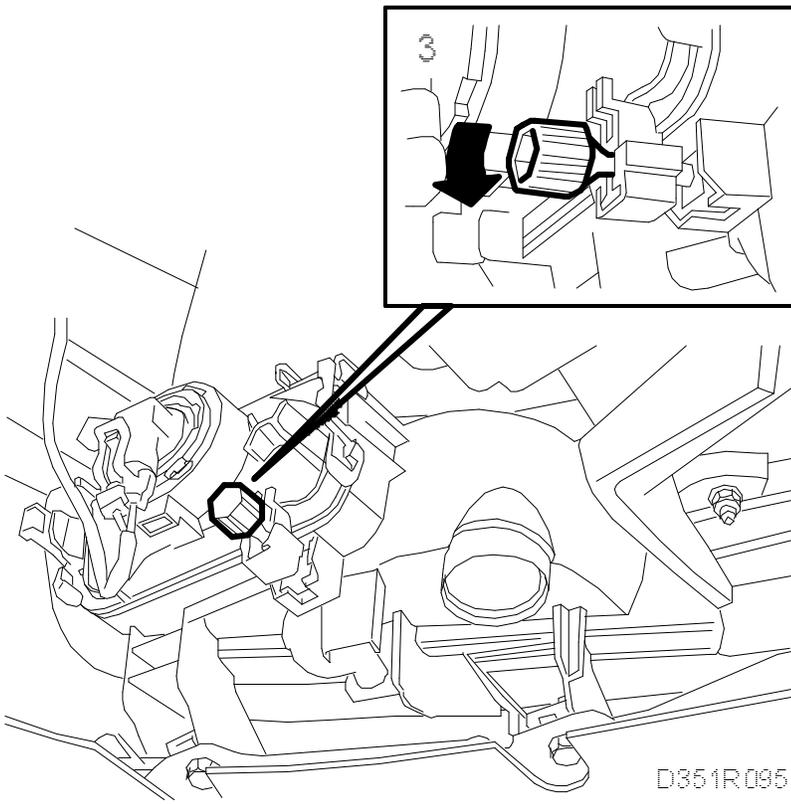

D351R095