


### Air recirculation

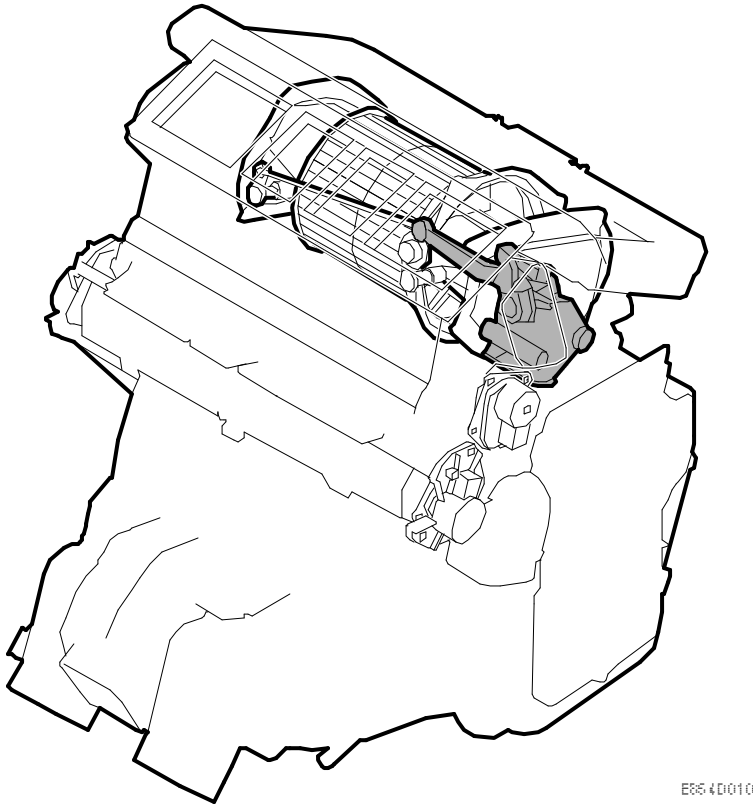

The climate unit has two air recirculation flaps located by the ventilation fan. A DC motor opens and closes the air recirculation flaps.

The flap can be placed in two positions; fresh-air and air recirculation. When air recirculation is selected, air to the unit is not taken from outside the car but from the cabin and recirculated instead.