
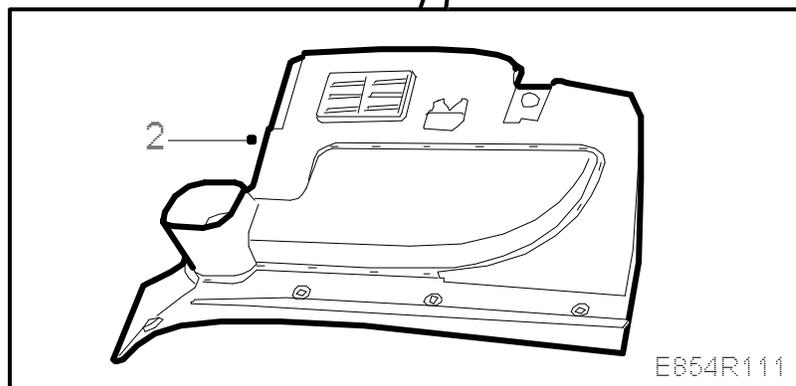


Cleaning the drainage hoses, heating and ventilation unit


To remove

1. Remove the side trim covering the filter housing.

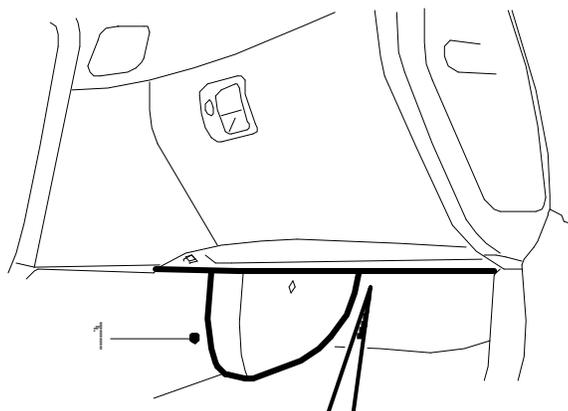


2. Remove the sound insulation from driver and passenger sides.
- 3.

Fold down the carpeting from the centre console on driver and passenger sides.

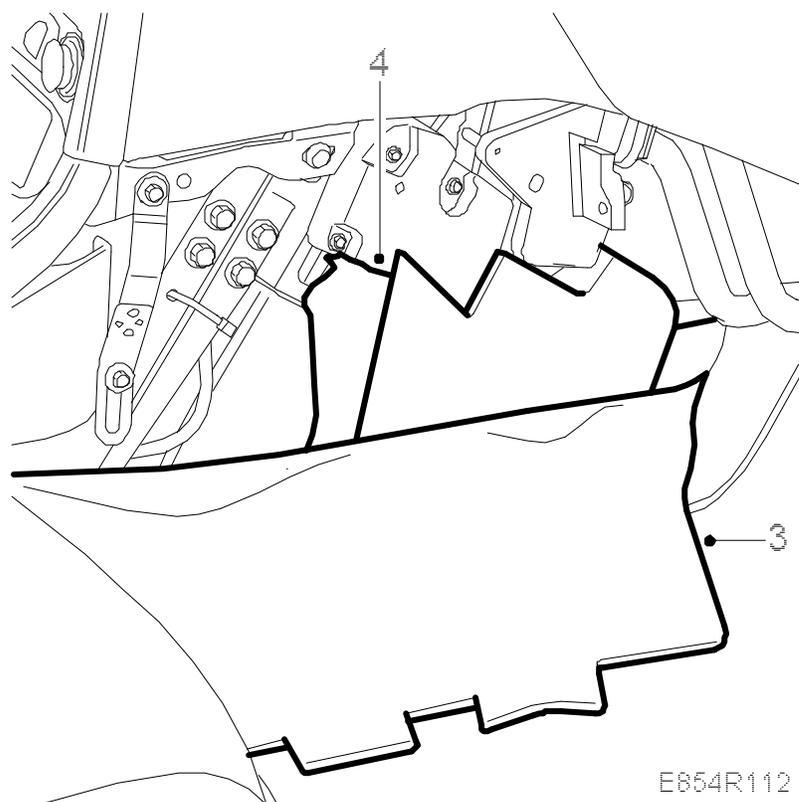


4. Remove the insulation from the passenger side.
- 5.


Remove the hose clip on the passenger side. Remove the drainage hose from the heating and ventilation unit.

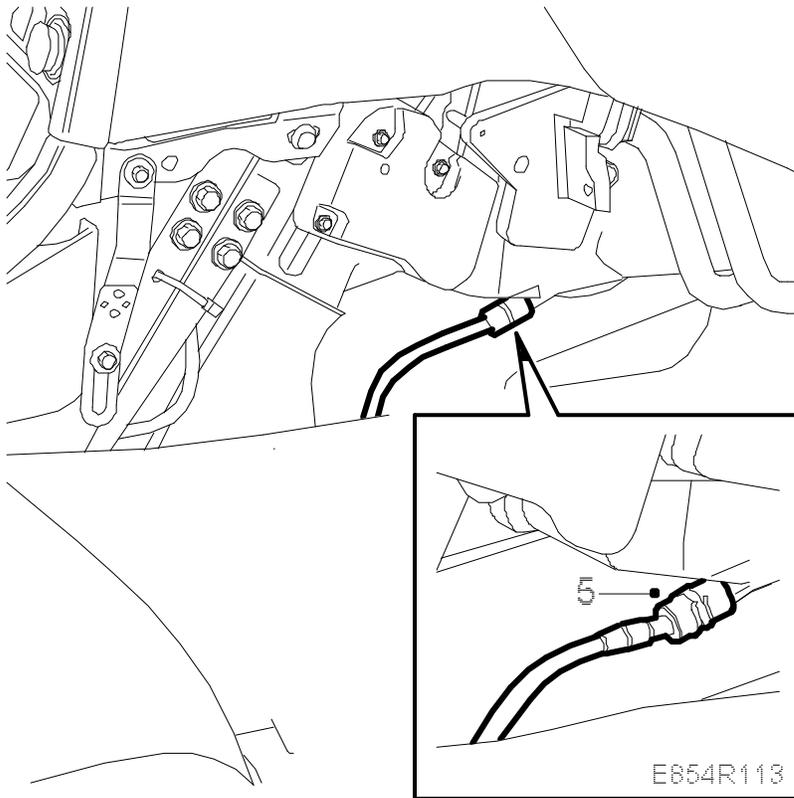

6. Remove the hose clip from the driver's side. Remove the drainage hose from the heating and ventilation unit.

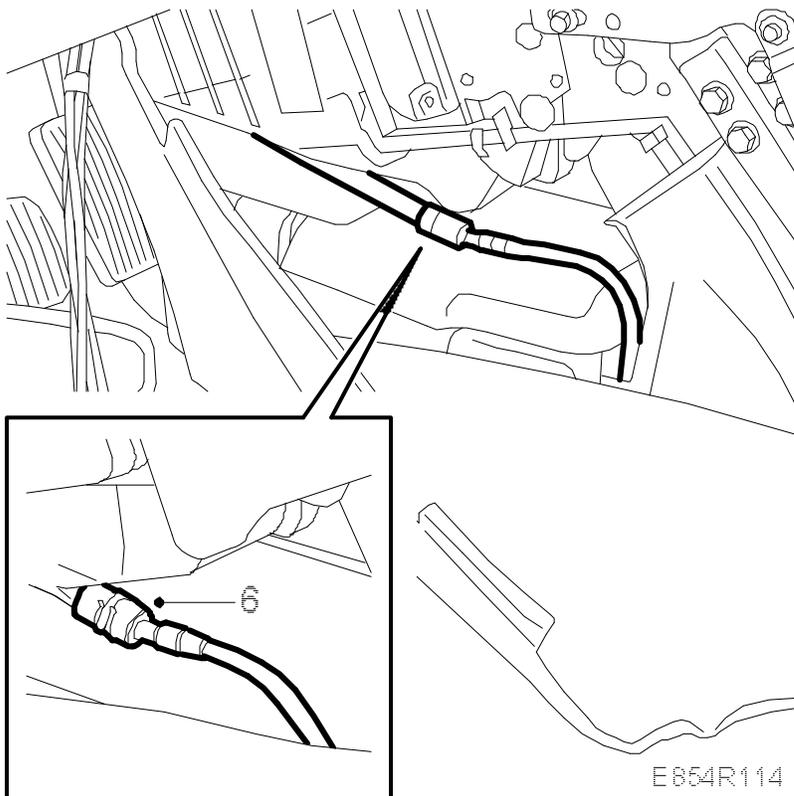


7. Blow compressed air through the hose, with the hose pointing towards the floor.

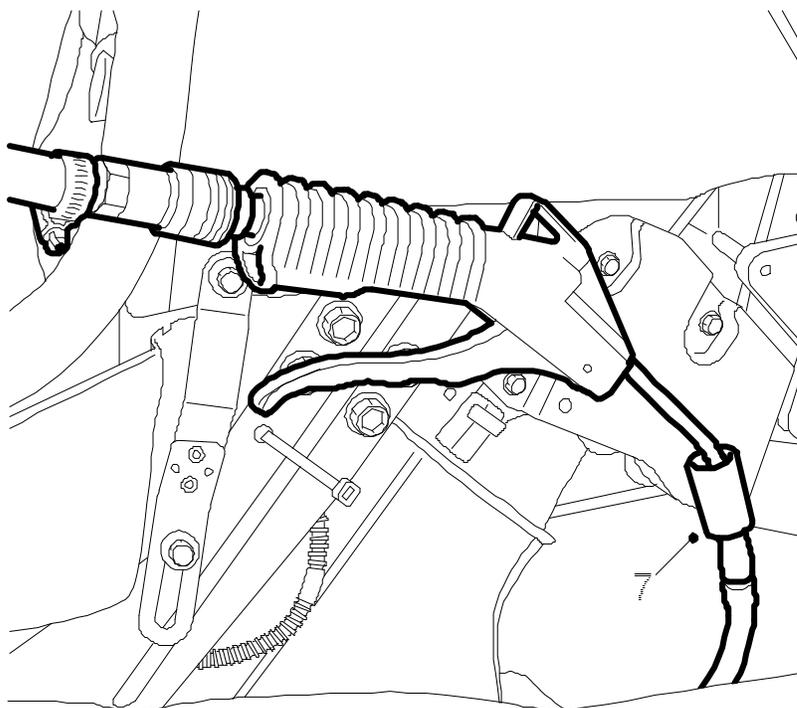

E854R115

- 8.

Blow compressed air through the spigot on the heating and ventilation unit.

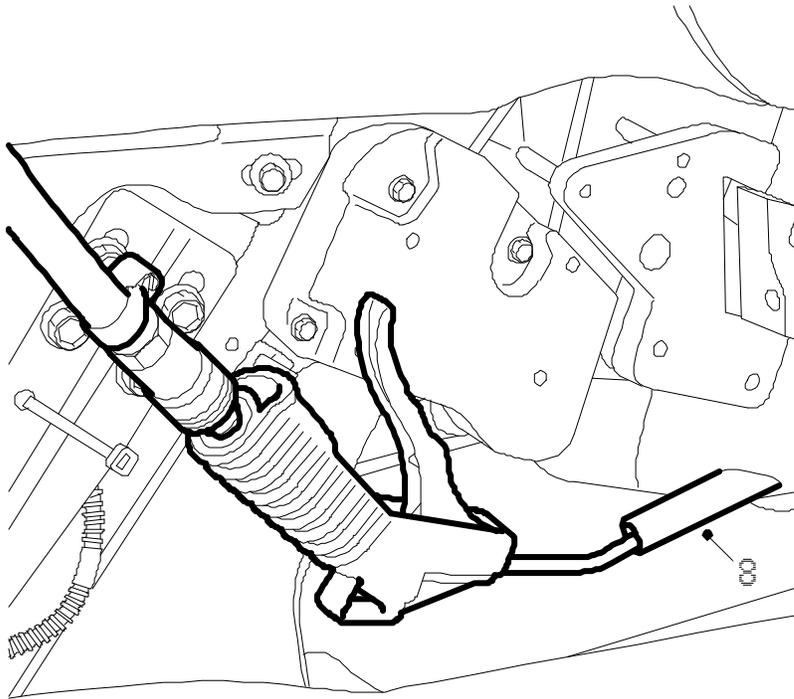


E854R116


To fit

- 1.

Fit the drainage hoses with hose clips to the heating and ventilation unit.

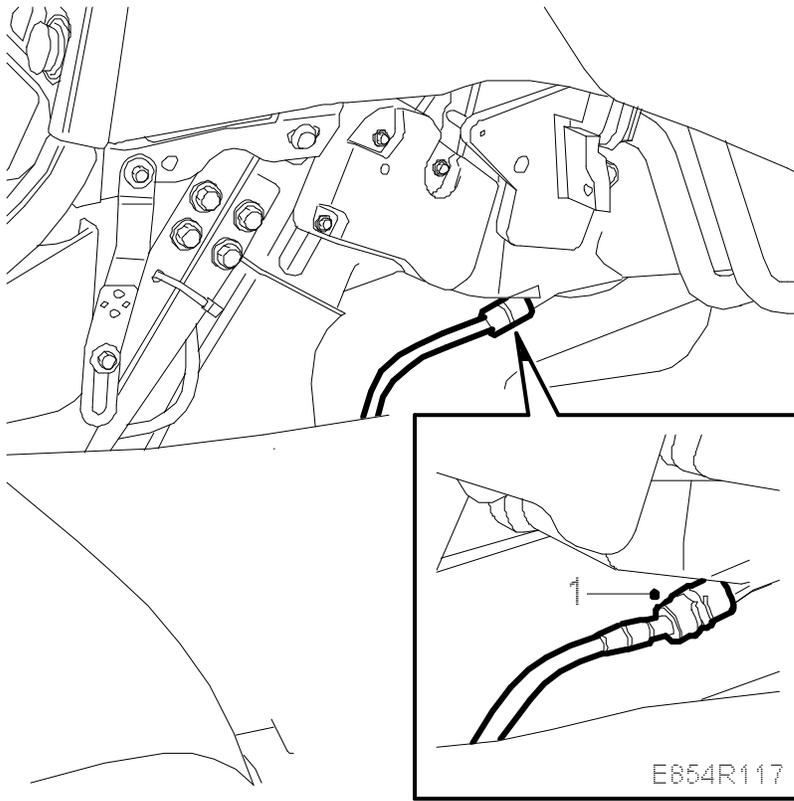

- 2. Fit the insulation on the passenger side.

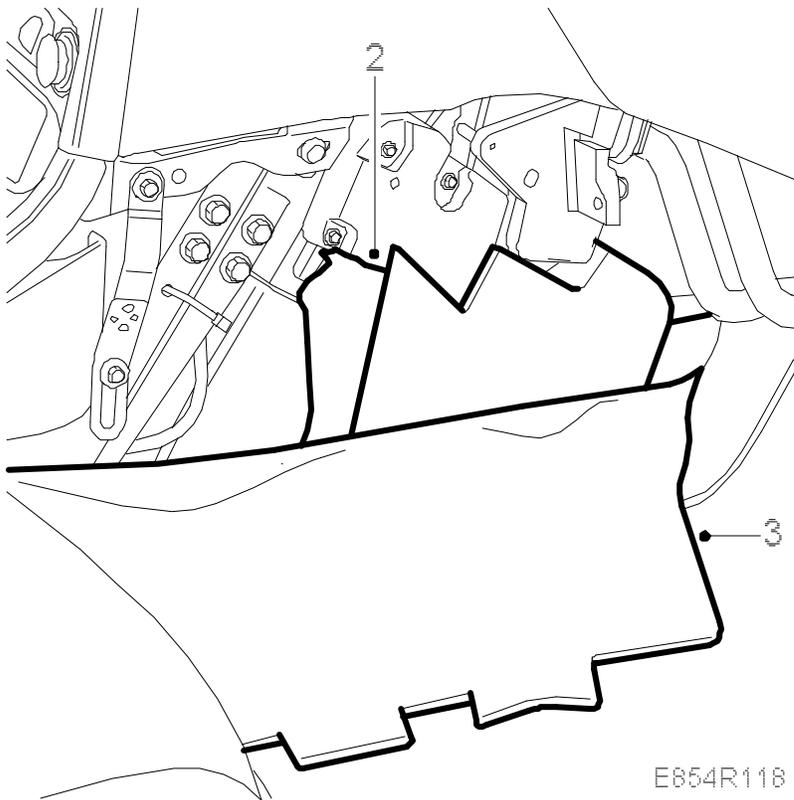

3. Fit the carpeting to the centre console on driver and passenger sides.
4. Fit the sound insulation on driver and passenger sides.
5. Fit the side trim covering the filter housing.

