

Trip computer SID (Saab Information Display)


The car is equipped with SID (Saab Information Display). This instrument contains a varying number of functions depending on the standard of equipment and the model variant.

SID 2 displays CHECK messages and has four trip-computer functions.

SID 3 displays CHECK messages and has eight trip-computer functions; see page 65.

**WARNING**

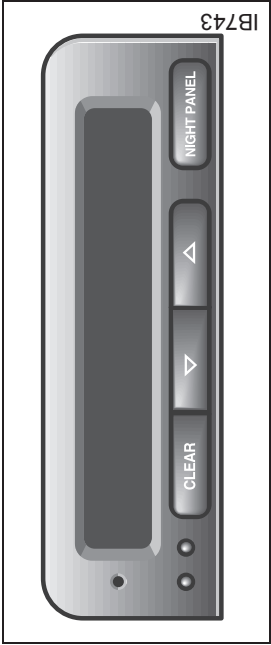

It is strongly recommended that the SID settings be changed only when the car is stationary. The driver's attention can otherwise easily be distracted from the road.



SID 2

SID 2

Selecting the function

- Use the  and  buttons to scroll through the following functions:
- | | |
|--------|-----------------------------------------------------|
| TEMP | Outdoor temperature and Date. |
| D.T.E. | Estimated range (distance to empty fuel tank). |
| FUEL Ø | Average fuel consumption since function last reset. |
| SPD Ø | Average speed since function last reset. |

Outside temperature (warning of slippery conditions)

Regardless of what function you have selected, SID automatically switches to the outside-temperature function when this temperature is between 26° and 38°F (-3° and +3°C), and also when temperature has been selected and it has been outside the range from 21° to 43°F (-6°C to +6°C) and again enters the range between 26° and 38°F (-3°C and +3°C).

**WARNING**

Remember that roads can be icy even at temperatures of above 38°F (+3°C), especially on bridges and stretches of road that are sheltered from the sun.

Resetting values

Resetting is accomplished by depressing the CLEAR button for at least 4 seconds.

The following values will be reset:

- Distance To Empty (DTE).
- Average fuel consumption.
- Average speed.

CHECK messages

When the engine is started, CHECKING will appear on the display for about four seconds, while the SID checks are being performed.

When a CHECK message is generated while the car is being driven, a chime will sound, INFO DISPL will illuminate on the main instrument panel, and the message will appear on the SID. The number of messages that can be displayed by the SID varies with the specification of the car.

If more than one CHECK message has been generated, the + symbol will appear to the left of the text on the display. The messages appear in order of priority.

If a new fault occurs while another message is being displayed, the message relating to the new one will appear for 10 seconds, after which the display will return to the earlier one.

Press CLEAR once to acknowledge a message, whereupon it will be cleared from the display. It will not be displayed again before the ignition has been switched off and then on again.

The following CHECK messages may be displayed:

Display shows:	See page
TEST BRAKE LIGHTS ¹⁾	183
BRAKE LIGHT FAILURE	183
FRONT LIGHT FAILURE	181
REAR LIGHT FAILURE	183
FOG LIGHT FAILURE	183
WASHER FLUID LEVEL LOW	180
FILL COOLANT FLUID	174
TIGHTEN FUEL FILLER CAP	138
KEY NOT ACCEPTED	39
REPLACE KEY BATTERY	39
SERVICE THEFT ALARM	39
TRANSMISSION OVERHEATING	144
TIME FOR SERVICE ²⁾	212

¹ This message cannot be removed by pressing CLEAR. Press the brake pedal to clear.

² This message will be displayed approximately 600 miles (1,000 km) before the next scheduled service is due, or when 365 days have elapsed since the last service. The message should be cleared at the time of that service (see the Saab Warranties & Service Record Booklet).

If you have carried out the service yourself, you can clear the message by pressing CLEAR once. Reset by pressing CLEAR for at least eight seconds, until "SERVICE" appears on the display and a chime sounds.

Night Panel

To improve night-driving conditions inside the car, the Night Panel mode can be selected. In this mode, the amount of information displayed is reduced, and only the most important instruments and displays will be illuminated.

When the Night Panel button is pressed, only the speedometer will be illuminated (up to the 87 mph or 140-km/h graduation), all the other instruments illumination will be extinguished and their needles moved to zero. Both the SID and the ACC displays will be extinguished and the backlighting for switches and other controls will be dimmed. Note: All indicator and warning lights, together with the display of CHECK messages, will operate as normal.

The following conditions will wake up the respective displays in the Night-Panel mode:

- Adjusting of the Audio System, SID or ACC (display comes on for ten seconds).
- CHECK message generated in the SID.
- High engine revs cause the rev counter to be illuminated until the engine speed has fallen again.
- If the quantity of fuel remaining falls below 4 gallons (15 liters), the fuel gauge will be illuminated.
- If the engine temperature rises above normal, the temperature gauge will be illuminated.

- If the speed of the car exceeds 84 mph (135 km/h), the entire speedometer will be illuminated.
- In cars with automatic transmission, if the selector lever is moved from D to position 3, 2 or 1, the selector indication on the main instrument panel will be illuminated. To restore the displays and lighting to the normal mode, press the Night-Panel button.

Setting the date

- 1 Use or to select TEMP/DATE.
- 2 Press the CLEAR button and for at least one second (year starts to flash and a chime sounds).
- 3 Set the year using or .
- 4 Touch CLEAR.
- 5 Set the month in the same way.
- 6 Touch CLEAR.
- 7 Set the day in the same way.
- 8 Press CLEAR to save the date setting.

Units and language versions

The SID has four sets of units:

METRIC	IMP. 1	IMP. 2	US
km	miles	miles	miles
km/h	mph	mph	mph
litres	gallons	gallons	US gallons
°C	°F	°C	°F
24 hours	12 hours	12 hours	12 hours

CHECK messages can be displayed in six language options: English, Swedish, German, French, Italian and Spanish.

Selecting units and language


- 1 Depress the CLEAR button and at the same time for 4 seconds until an audible signal sounds.
- 2 Select the required units with or .
- 3 Briefly depress the CLEAR button.
- 4 Press or to select the required language.
- 5 Briefly depress the CLEAR button.



Clock


Set the clock by using the two buttons under the digital clock on the left of the display. **Programming features, see page 231.**

SID 3 (SCC)

**WARNING**

It is strongly recommended that the SID settings be changed only when the car is stationary. The driver's attention can otherwise easily be distracted from the road.


Selecting the function

Use the  button to scroll through the following functions:

- DIST Distance to destination / Trip meter.
- ARRIV Estimated time of arrival.
- ALARM Alarm function.
- SPD W Speed warning (chime).

Use the  button to scroll through the following functions:

- TEMP Outdoor temperature and Date.
- D.T.E. Estimated range (distance to empty fuel tank).
- FUEL Ø Average fuel consumption since function last reset.
- SPD Ø Average speed since function last reset.

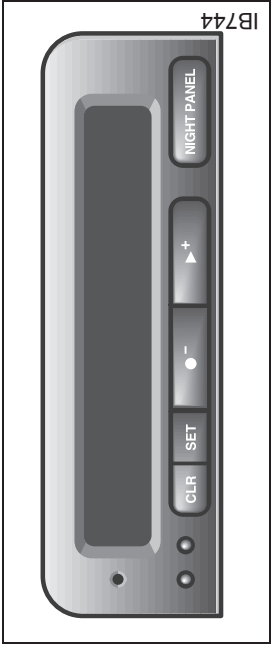

SID 3 (SCC, Saab Car Computer)

Outside temperature (Frost warning)





Regardless of what function you have selected, SID automatically switches to the outside-temperature function when the temperature is between 26° and 38°F (-3° and +3°C), and also when temperature is selected and it has been outside the range from 21° to 43°F (-6°C to +6°C) and again enters the range between 26° and 38°F (-3°C and +3°C).

**WARNING**




Remember that roads can be icy even at temperatures of above 38°F (+3°C), especially on bridges and stretches of road that are sheltered from the sun.

Entering values for the functions

Values can be entered for the following functions: SPD Ø (SPEED AVERAGE), DIST, ARRIV, ALARM and SPD W.

- 1 Select the desired function using  or  .
- 2 Press the SET button for at least one second (figures start to flash and a chime sounds).
- 3 Use  or  to increase or decrease the value (press CLR to reset).
- 4 Press SET to record the value.

Setting the date

- 1 Use  to select TEMP/DATE.
- 2 Press the SET button for at least one second (year starts to flash and a chime sounds).
- 3 Set the year using  or .
- 4 Touch SET.
- 5 Set the month in the same way.
- 6 Touch SET.
- 7 Set the day in the same way.
- 8 Press SET to save the date setting.

Turning the Alarm and Speed warning on or off

- 1 Select the Alarm or Speed-warning function.
- 2 Press SET to turn on the function.
Press CLR to turn off the function.

When either function is on, an asterisk * will be visible on the far right of the display. The function will be visible even if another function has been selected.

The Alarm and Speed-warning settings will not be cancelled when the engine is switched off.

When the Alarm has been set to come on at a specified time, it will only be activated once – it will not come on at the same time every day. Press SET to turn it on again. The Alarm will continue to beep for one minute if not switched off.

Calculation of arrival time and average speed

The settings must be made before the journey is started.

Calculation of arrival time:

- 1 Select DIST using the  button.
- 2 Hold SET until display starts flashing.
- 3 Set the destination distance using  or .
- 4 Press SET to store settings.

When ARRIV is selected during the journey, the arrival time based on the average speed over the past 20 minutes will be displayed. Press DIST and the distance remaining to the destination will be displayed in the same way.

After the distance to destination has

decreased to zero, the DIST will function as a trip meter (see "Using DIST as a trip meter"). The starting value for the trip meter will be the last distance set in the DIST function.

Example: The DIST setting was 100 miles. Once 100 miles (160 km) has been covered, the DIST will start to function as a trip meter, the initial reading of which will be 100 miles (160 km).

Using DIST as a trip meter

If no value has been set for the DIST function, DIST will now function as a trip meter (indicated by an arrow on the far right of the display).







Press CLR to reset the trip meter.

Under 1000 miles the distance will be shown in increments of 0.1 miles, there-after, the reading will change in increments of 1.0 miles.

Metric units: for just under a kilometer, the distance will be shown in increments of 10 meters, there-after, the reading will change in increments of 100 meters.





When DIST is functioning as a trip meter, the ARRIV function will display the current time.

To calculate the arrival time if a specified average speed is maintained

- 1 Select DIST using the  button.
- 2 Hold the SET button for two seconds.
- 3 Set the distance to be covered using  or .
- 4 Press SET to store settings.
- 5 Press  to select SPD Ø.
- 6 Hold the SET button for two seconds.
- 7 Set the average speed you intend to drive at using  or .
- 8 Press SET to display the estimated arrival time.

At the beginning of a journey, the SPD Ø and ARRIV functions will display current values. If values are set during the journey, the new values will be displayed after a delay of about 10 seconds.

Calculating the requisite average speed:

- 1 Press  to select DIST.
- 2 Hold the SET button for two seconds.
- 3 Set the distance to be covered using  or .
- 4 Press SET to store settings.
- 5 Press  to select ARRIV.
- 6 Hold the SET button for two seconds.
- 7 Set the desired arrival time using  or .
- 8 Press SET to display the average speed you need to maintain to arrive at the desired time.

At the beginning of a journey, the SPD Ø and ARRIV functions will display current values. If values are set during the journey, the new values will be displayed after a delay of about 10 seconds.

Resetting values

To reset the values, press CLR for at least four seconds.

The following functions will be reset simultaneously:

- Estimated range on remaining fuel (function based on a fuel consumption of 28 mpg)
- Average fuel consumption
- Average speed
- Arrival time (function based on current speed)

Programmed values for DIST, ALARM and SPD W will not be reset (see the respective function).

CHECK messages

When the engine is started, CHECKING will appear on the display for about four seconds, while the SID checks are being performed.

When a CHECK message is generated while the car is being driven, a chime will sound, INFO DISPL will illuminate on the main instrument panel, and the message will appear on the SID. The number of messages that can be displayed by the SID varies with the specification of the car.

If more than one CHECK message has been generated, the + symbol will appear to the left of the text on the display. The messages appear in order of priority.

If a new fault occurs while another message is being displayed, the message relating to the new one will appear for 10 seconds, after which the display will return to the earlier one.

Press CLR once to acknowledge a message, whereupon it will be cleared from the display. It will not be displayed again before the ignition has been switched off and then on again.

The following CHECK messages may be displayed:

Display shows:	See page
TEST BRAKE LIGHTS ¹⁾	183
BRAKE LIGHT FAILURE	183
FRONT LIGHT FAILURE	181
REAR LIGHT FAILURE	183
FOG LIGHT FAILURE	184
WASHER FLUID LEVEL LOW	180
TIGHTEN FUEL FILLER CAP	138
FILL COOLANT FLUID	174
KEY NOT ACCEPTED	39
REPLACE KEY BATTERY	39
SERVICE THEFT ALARM	39
TRANSMISSION OVERHEATING	144
TIME FOR SERVICE ²⁾	212

¹ This message cannot be removed by pressing CLR. Press the brake pedal to clear.

² This message will be displayed approximately 600 miles (1,000 km) before the next scheduled service is due, or when 365 days have elapsed since the last service. The message should be cleared at the time of that service (see the Saab Warranties & Service Record Booklet).

If you have carried out the service yourself, you can clear the message by pressing CLR once. Reset by pressing CLR for at least eight seconds, until "SERVICE" appears on the display and a chime sounds.

Night panel

To improve night-driving conditions inside the car, the Night Panel mode can be selected. In this mode, the amount of information displayed is reduced, and only the most important instruments and displays will be illuminated.

When the Night Panel button is pressed, only the speedometer will be illuminated (up to the 87-mph or 140-km/h graduation), all the other instruments illumination will be extinguished and their needles moved to zero. Both the SID and the ACC displays will be extinguished and the backlighting for switches and other controls will be dimmed.

Note: All indicator and warning lights, together with the display of CHECK messages, will operate as normal.

The following conditions will wake up the respective displays in the Night-Panel mode:

- Setting of the Audio System, SID or ACC (display comes on for ten seconds).
- CHECK message generated in the SID.
- High engine revs cause the rev counter to be illuminated until the engine speed has fallen again.
- If the quantity of fuel remaining falls below 4 gallons (15 liters), the fuel gauge will be illuminated.
- If the engine temperature rises above normal, the temperature gauge will be illuminated.
- If the speed of the car exceeds 84 mph (135 km/h), the entire speedometer will be illuminated.
- In cars with automatic transmission, if the selector lever is moved from D to position 3, 2 or 1, the selector indication on the main instrument panel will be illuminated.

To restore the displays and lighting to the normal mode, press the Night-Panel button.





Units and language versions

The SID has four sets of units:

METRIC	IMP. 1	IMP. 2	US
km	miles	miles	miles
km/h	mph	mph	mph
litres	gallons	gallons	US gallons
°C	°F	°C	°F
24 hours	12 hours	12 hours	12 hours

CHECK messages can be displayed in six language options: English, Swedish, German, French, Italian and Spanish.

Selecting units and language

- 1 Press the CLR and SET buttons at the same time for 4 seconds until an audible signal sounds.
- 2 Press  or  to select the required units.
- 3 Touch SET.
- 4 Press  or  to select the required language.
- 5 Touch SET.



Clock

Set the clock by means of the two small buttons under the digital clock on the left of the display.

Programming features, see page 231.