

List of components

No.	Name Location	Illustration
Components		
8	Dipped beam relay, in relay box in engine bay	➔
8a	Main beam relay, in relay box in engine bay	➔
10	Light switch, on the instrument panel between the steering wheel and the driver's door	➔
11	Main beam lamp, in headlamp	FL FR
11a	Xenon lamp, in headlamp	FL FR
13	Lamp, parking light, in headlamp	FL FR
22a	Fuse box, dashboard on end of dashboard next to driver's door	➔
215	Dipswitch, in direction indicator stalk switch	➔
280	Motor, headlamp beam adjustment, in headlamp	FL FR
342a	Fuse box, engine bay, behind the battery	➔
445	Data link connector, 16-pin, CARB under dashboard by steering column	➔
540	Main instrument unit, in dashboard in front of driver	➔
628	Control module, DICE, LHD: above the dashboard relay box RHD: behind the dashboard relay box	➔
663FR	RH headlamp to the right of the radiator	➔
665	Solenoid, xenon lamp screen, in headlamp	FL FR
682	Control module, headlamp, in headlamp	FL FR
16-pin connector		
H16-5	Under dashboard by steering column	➔
43-pin connector		
H43-1	White connector in the connector console under the LH A-pillar	➔
Crimp connectors		
J1	Approx. 120 mm from the branching point of grounding point G31 towards the RH headlamp.	➔
J6	Approx. 355 mm from branching hydraulic unit towards main fuse box in engine bay	➔

J42	LHD: Approx. 145 mm from grounding point G40 branching point towards fuse box RHD: Approx. 50 mm from branching point of grounding point G42 towards relay box	➔
J55	LHD: Approx. 125 mm from branching DICE control module towards the relay box RHD: Approx. 430 mm from grounding point G42 branching point towards DICE control module	➔
J62	LHD: Approx. 155 mm from branching point of floor lighting (front left) towards DICE control module RHD: Approx. 50 mm from the branching point of the data link connector towards the steering wheel changeover switches.	➔
J65	LHD: Approx. 100 mm from branching of MIU towards the radio RHD: Approx. 260 mm from branching of grounding point G41S towards MIU/SID	➔
J89	LHD: Approx. 260 mm from branching of MIU/SID towards DICE RHD: Approx. 110 mm from branching of grounding point G41S towards MIU/SID	➔
J163	LHD: Approx. 120 mm from branching connector H33-1 towards fuse box RHD: Approx. 160 mm from branching data link connector towards DICE control module	➔
J174	LHD: Approx. 140 mm from branching connector H33-1 towards fuse box RHD: --	➔
J201	in main fuse box in engine bay	➔
J203	Approx. 70 mm from branching connector H33-1 towards engine bay	➔
J208	in main fuse box in engine bay	➔
J216	In the engine bay approximately 150 mm from the cabin lead-in towards the RH indicator lamp	➔
Grounding points		
G30	In the engine compartment on the side plate in front of the LH wheel housing	➔
G31	On RH structural member behind headlamp	➔
G40	In the cabin on the LH side of the knee member	➔
G42	In the cabin on the RH side of the knee member	➔