




Ventilation fan

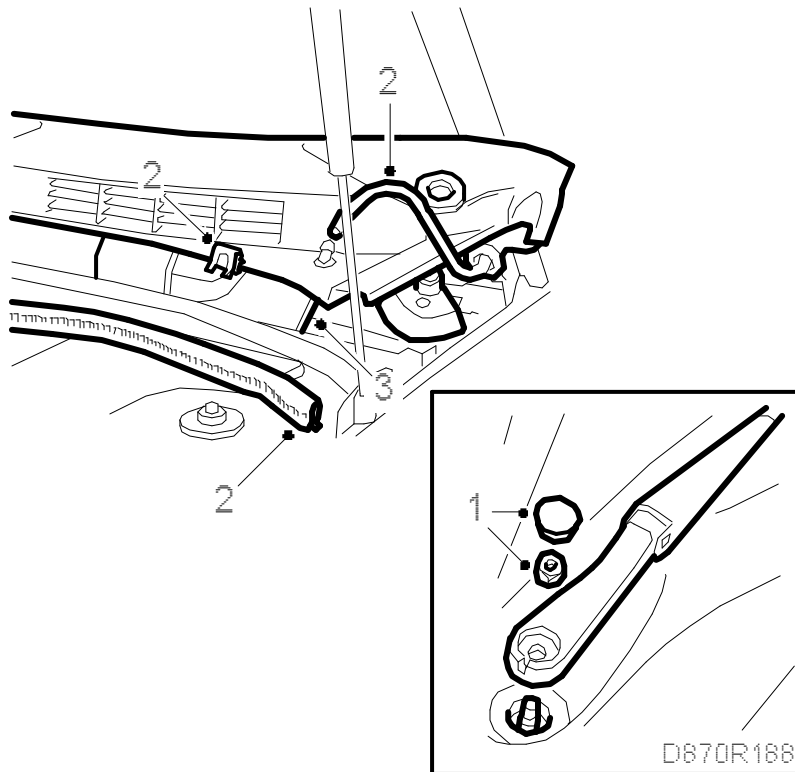


Removing

1. Remove the wiper arms.
2. Remove the cover over the bulkhead.
3. Remove the water deflector.
- 4.


Remove the wiper unit.

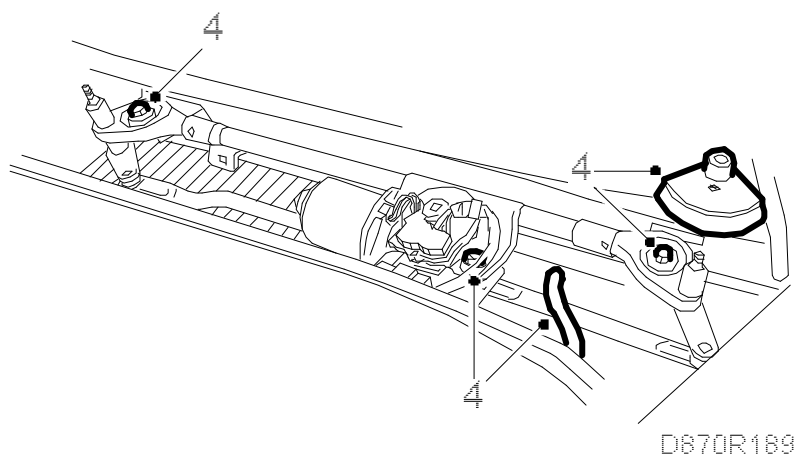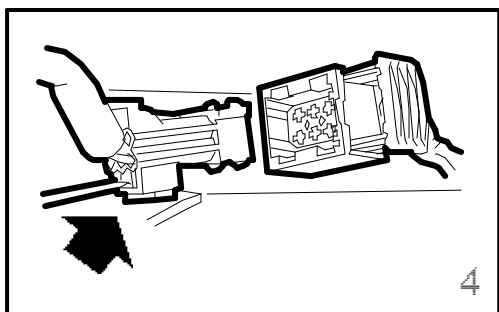

5. Remove the fresh-air filter.

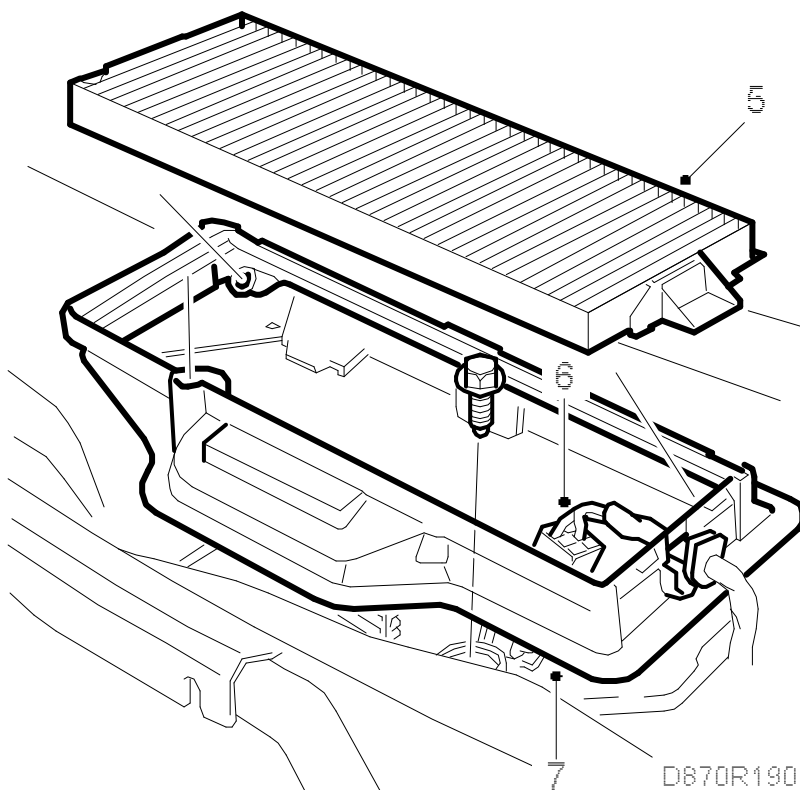

6. Unplug the ventilation fan electric connector.
7. Remove the four retaining bolts for the fresh-air filter frame, remove the frame.
8. Remove the cover over the ventilation fan.

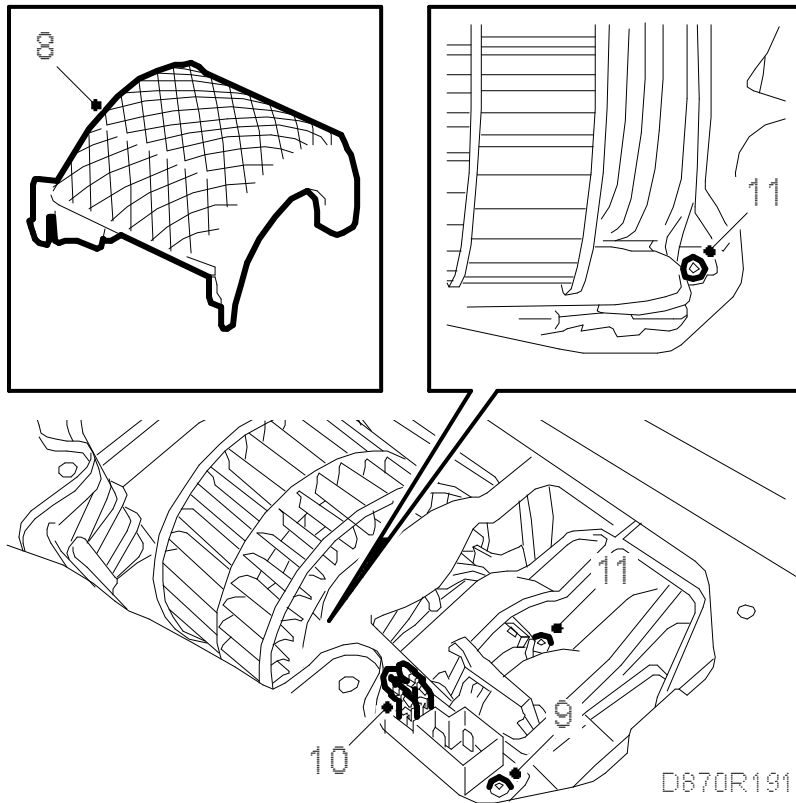


9. Remove the bolt that secures the electric connector.
10. Remove the cables from the electric connector.
11. Remove the bolts and lift up the ventilation fan.

Note

Be careful so that the bolts do not fall into the climate control unit.

Fitting

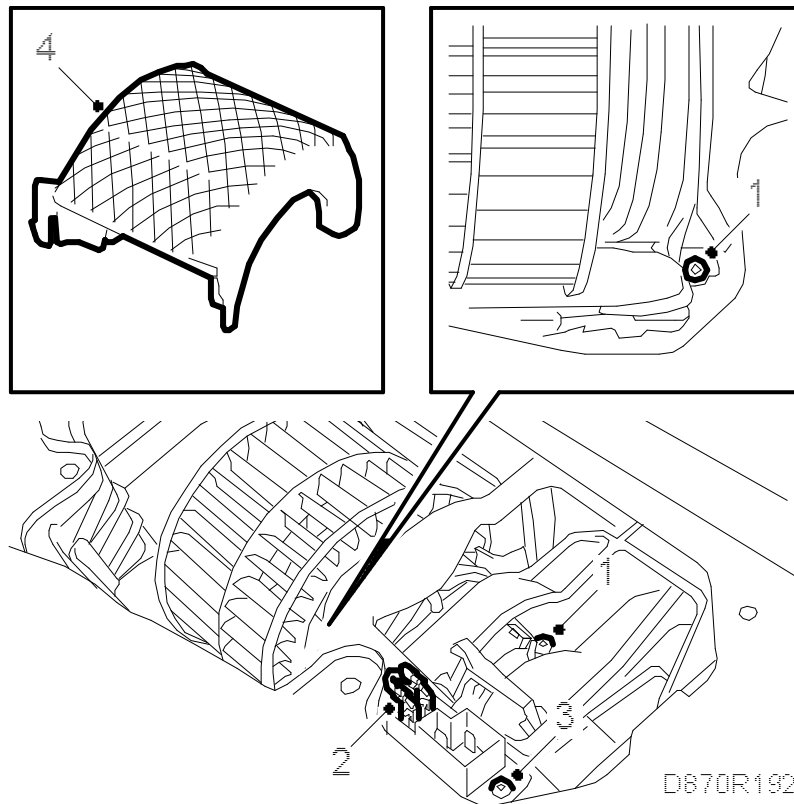


1. Fit the ventilation fan and tighten the bolts.

Note

Be careful so that the bolts do not fall into the climate control unit.

2. Connect the cables to the electric connector.
3. Fit the electric connector and tighten the bolt.
4. Fit the cover over the ventilation fan.
- 5.

Refit the ventilation filter frame and tighten the four retaining bolts.


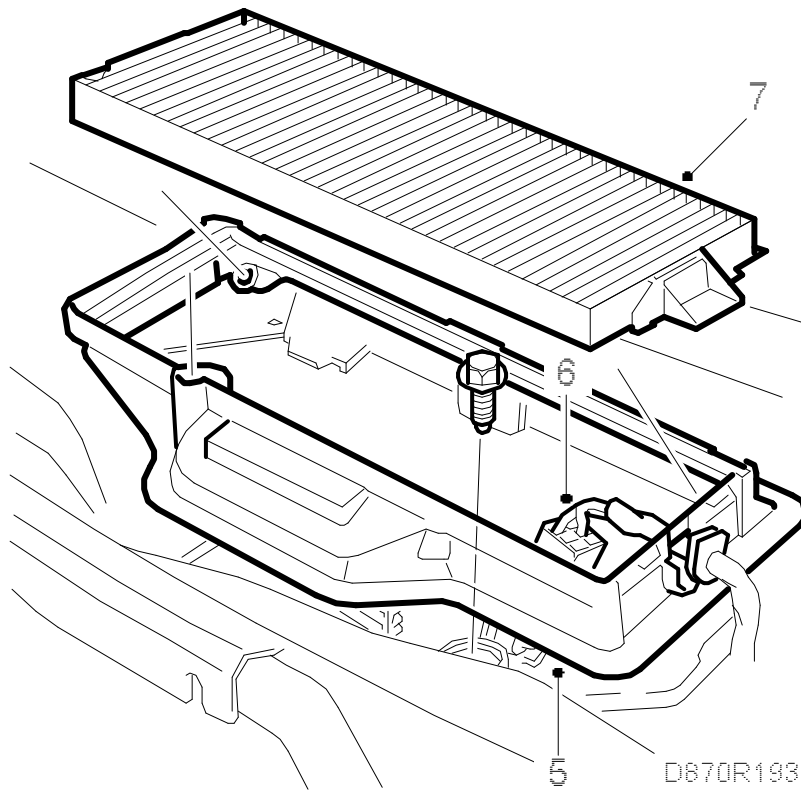


6. Plug in the ventilation fan connector.

7. Fit the ventilation filter.


8.

Refit the wiper unit.

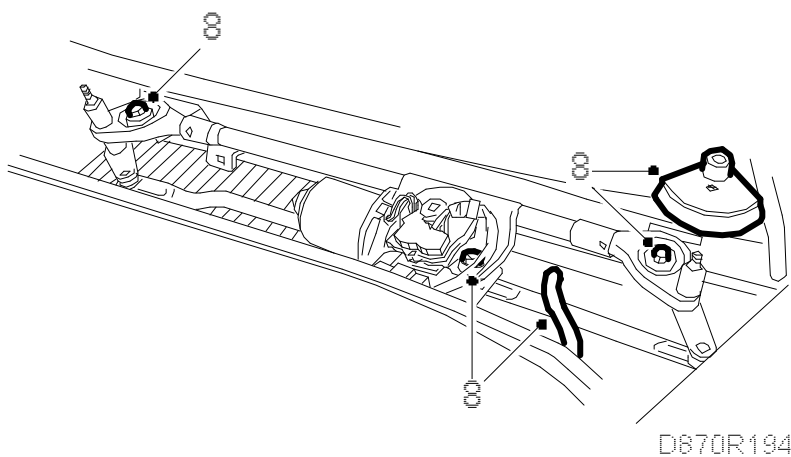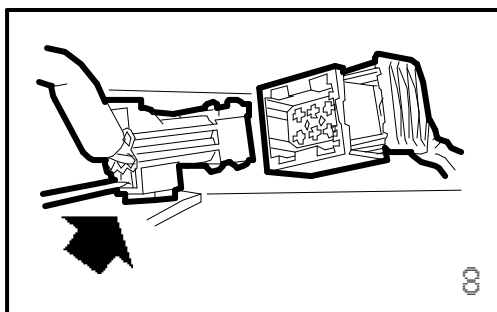

D870R194

9. Refit the water deflector.

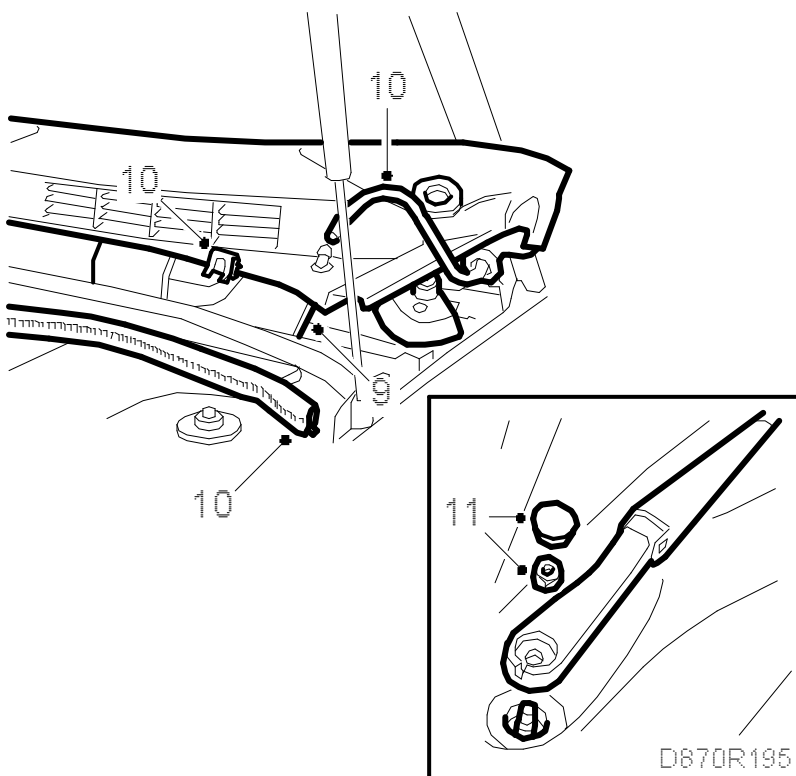

D870R195

10. Refit the cover over the bulkhead.

11. Refit the wiper arms.