



C0698 9-3
03A/0910

0910 Electric equipment, other - Audio system (1998 - 1999)

Pos	Part No.	Article	Usage	Qty
4	47 10 315	Radio Note: With cassette player	1998, RHD, GB, NLS	1
4	47 10 331	Radio Note: With CD-player.	1998, EU, NLS	1
4	47 10 364	Radio Note: With CD-player.	1998, PA, NLS	1
4	47 10 356	Radio Note: With CD-player.	1998, JP, NLS-USE 5043252	1
4	47 10 349	Radio Note: With CD-player. Ch. --X2020000 Ch. --X7020000	LHD, CA, US, NLS-USE 5372347	1
4	47 10 323	Radio Note: With cassette player Ch. --X2020000 Ch. --X7020000	LHD, CA, US, NLS-USE 5043260	1
4A		*Button Note: Spare buttons for the Clarion radio to be ordered from Clarion importer.		X
7	49 47 123	Cage		1
8	42 32 807	Cable harness radio-amplifier Note: With door loudspeaker.		1
9	47 12 626	Amplifier Note: With door loudspeaker.	LHD, NLS-USE 93167062	1
9	47 12 618	Amplifier Note: With door loudspeaker.	RHD	1
12	79 22 495	Screw Note: With door loudspeaker.		2
13	47 12 634	Loudspeaker		2
13	47 12 675	Loudspeaker Note: Ch. --X2020000 Ch. --X7020000	LHD, CA, US	2
14	79 22 354	Screw	NLS-USE 92153219	4
15	47 12 659	Loudspeaker		2
16	79 70 304	Screw Note: Ch. --X2021148		8
17	47 12 642	Loudspeaker Note: With door loudspeaker.		2
18	79 78 422	Screw Note: With door loudspeaker.		6
19	46 17 072	CD-player Note: Ch. --X2020901 Ch. --X7022162	NLS-USE 400126470	1
20	47 11 255	*CD magazine	NLS-USE 400110235	1
21	84 41 503	Screw		2
22	84 41 503	Screw		2
23	44 12 730	Bracket		1
24	79 77 929	Nut	NLS-USE 92150133	2
25	44 28 207	Bracket		1
26	79 77 929	Nut	NLS-USE 92150133	2
27	79 77 929	Nut	NLS-USE 92150133	2
28	48 12 814	Bracket		1
29	48 12 806	Bracket		1
30		Antenna	Goto 3A - 917	
34	47 12 667	Loudspeaker	CV	2
35	79 22 438	Screw	CV	4

0910 Electric equipment, other - Audio system (1998 - 1999)

Pos	Part No.	Article	Usage	Qty
36		Antenna cable	Goto 3A - 917	
39		Antenna	Goto 3A - 917	