


Stepping motor, air-mixing RH

To remove

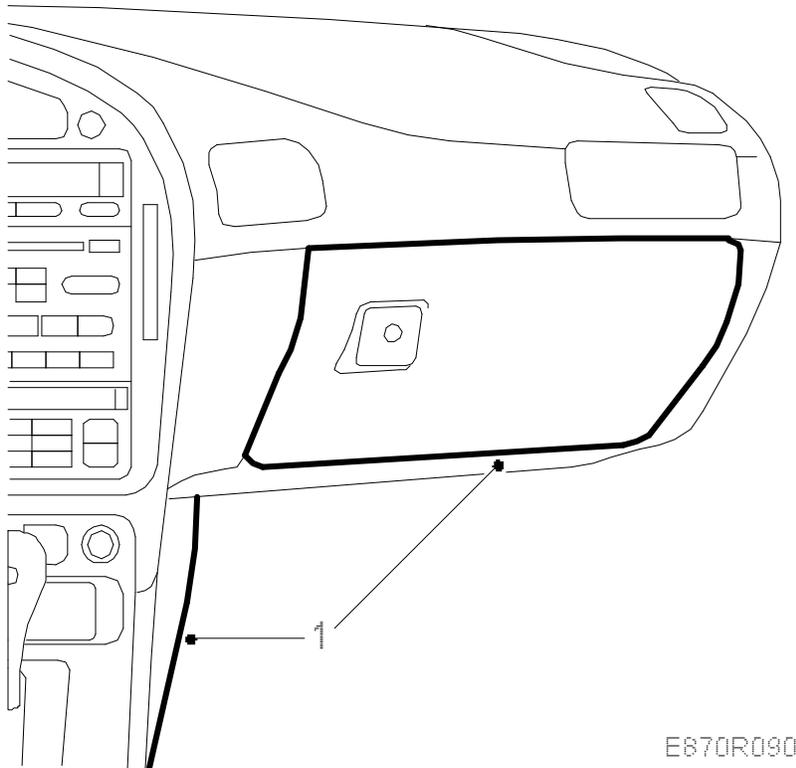


Put the air-mixing control to max cold or max heat before commencing removal.

1. Remove the glove compartment, see group 8, Interior equipment →, "Adjustment and replacement".

Remove the trim from the side of the centre console.

- 2.

Remove the stepping motor, 2 bolts.

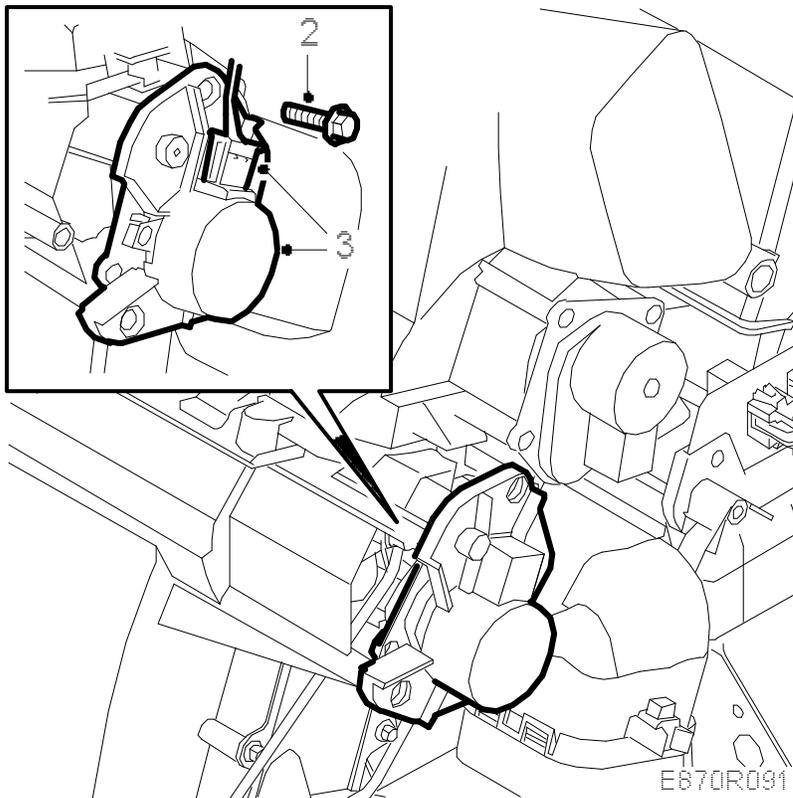

3. Unplug the connector.

To fit

When fitting, the lower flap must be positioned at the same end position as the upper flap.

Fit in reverse order.

Note

When fitting the stepping motor, grasp the air-blending flap via the floor air duct, otherwise the flap may jump out of its mounting.