


Ignition discharge module, rear**To remove**


1. Remove the engine cover.
2. Undo the screws to the heat shield.
3. Unplug the connector to the pressure sensor on the intake manifold.
- 4.

Remove the ignition discharge module.

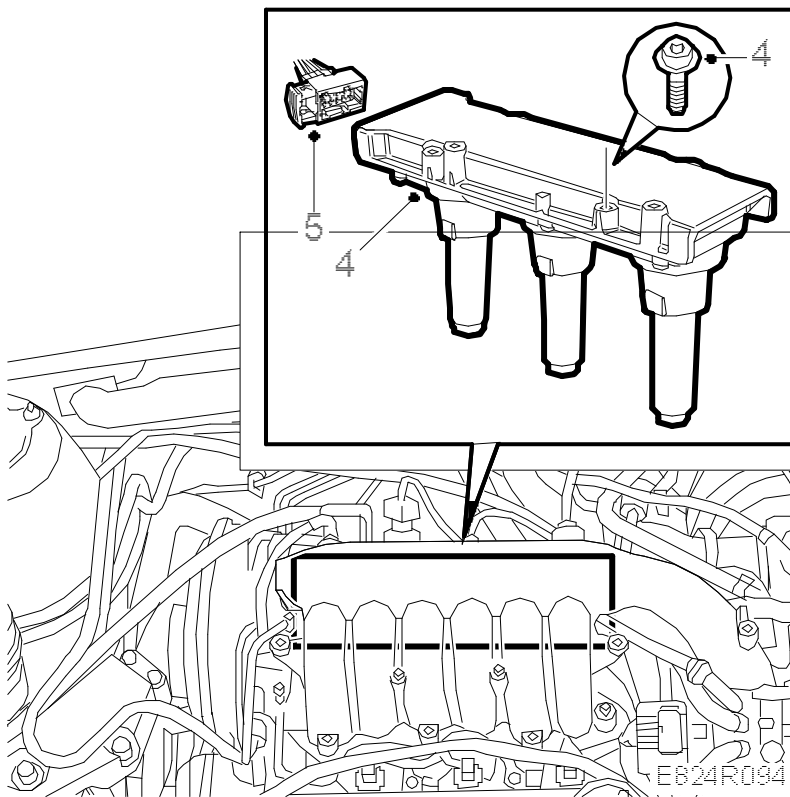

5. Unplug the ignition discharge module connector.

To fit

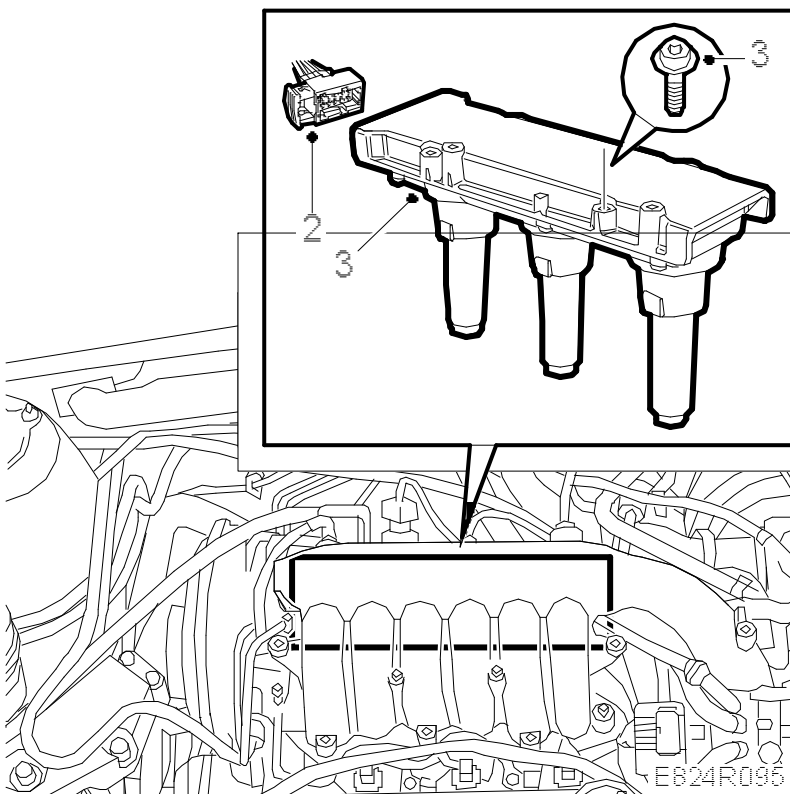


1. Coat the rubber seals with Krytox (part No. 30 19 312).

2. Spray the connectors with Kontakt 61 (part no. 30 04 520). Plug the connectors into the ignition discharge module.
3. Fit the ignition discharge module.

Tightening torque: 8 Nm (6 lbf ft).

4. Plug in the connector to the pressure sensor on the intake manifold.

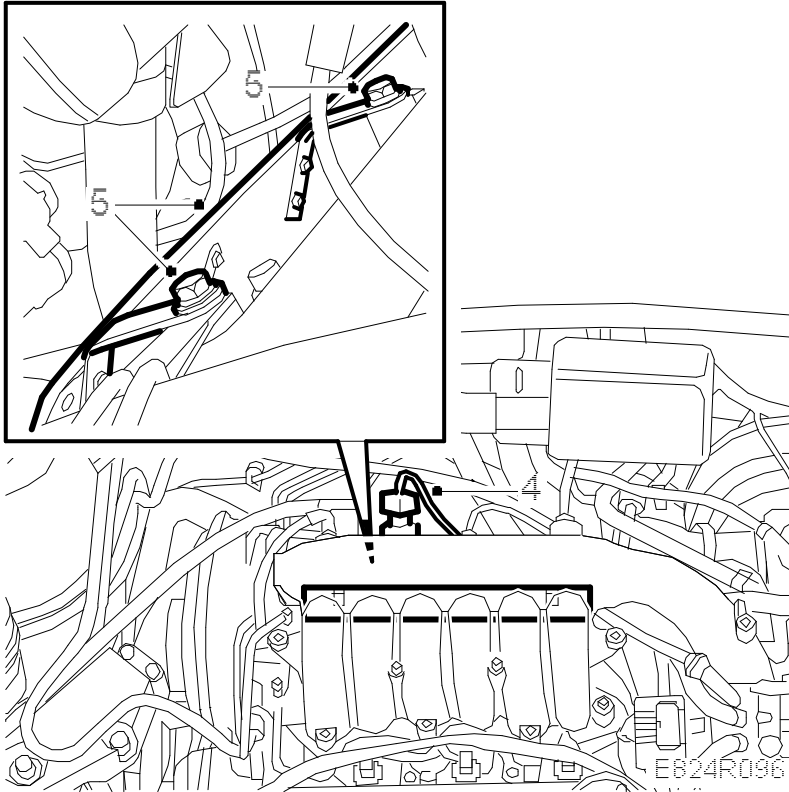

5. Screw on the heat shield.
6. Fit the cover.