



C1366 9-5
06/0100

0100 Steering (1998 - 2008)

Pos	Part No.	Article	Usage	Qty
1	93 185 279	Arm	1998-2001, LH (4835708)	1
		Note: See TSB 731-2472		
	93 185 278	•End piece		1
	51 25 802	•Screw		3
	43 48 512	•Nut		3
	46 85 129	•Washer		3
	52 33 374	•Bushing		1
	79 87 456	•Nut		1
1	93 185 280	Arm	1998-2001, RH (4835716)	1
		Note: See TSB 731-2472		
	93 185 278	•End piece		1
	51 25 802	•Screw		3
	43 48 512	•Nut		3
	46 85 129	•Washer		3
	52 33 374	•Bushing		1
	79 87 456	•Nut		1
2	45 66 899	Bushing		2
4	49 08 109	Bushing	1998-1999, NLS-USE 5063391	2
5	48 35 740	End piece	1998-1999, NLS-USE 5231683	2
5	93 185 278	End piece	1998-2001	2
		Note: See TSB 731-2472		
6	43 48 330	Screw	1998-2001	6
7	43 48 355	Nut	1998-2001	6
8	79 79 552	Nut	1998-2001, NLS-USE 92153201	2
10	45 69 638	Steering knuckle housing	1998-2001, LH, NLS-USE 90490135	1
10	90 490 136	Steering knuckle housing	1998-2001, RH, (45 69 646)	1
11	46 89 923	Angular contact ball bearing.	1998-2001	2
12	43 45 450	Retaining ring		2
15	79 84 933	Screw	1998-2001	2
16	79 85 856	Screw	1998-2001	4
17	49 40 219	Screw	1998-2001	2
18	43 48 009	Nut	1998-2001	2
19		Frame	1998-1999	1
			Goto 8A - 100	