



C1407 9-3  
02/0610

## 0610 Fuel system - Fuel pipe - Fuel filter (1998 - 2002), DIESEL

Pos	Part No.	Article	Usage	Qty
1	49 64 078	Fuel pipe Note: Ch. --12020000		1
2	43 74 203	Banjo bolt Note: Ch. --12020000	NLS-USE 12794638	1
3	48 98 987	Banjo bolt Note: Ch. --12020000		1
4	81 24 133	Gasket	NLS-USE 11066422	2
5	81 24 141	Gasket	NLS-USE 92150435	2
6	47 51 376	Bracket		1
7	79 71 294	Screw		1
8	49 60 837	Fuel pipe Pressure Note: Ch. --12020000		1
9	43 97 980	Fuel pipe Return Note: Ch. --12020000		1
10	49 60 779	Clamp	NLS-USE 5125778	7
11	48 07 939	Tensioning band		1
12	92 150 191	Tensioning band	NLS-USE 11900513	2
13	43 97 741	Fuel pipe Heater		2
15	49 60 878	Clamp		1
16	42 27 849	Clip	NLS-USE 90374225	1
17	43 97 766	Tube		1
19	42 29 985	Bracket		2
20	49 60 829	Fuel pipe		1
21	79 74 546	·O-ring		2
22	47 27 731	Fuel pipe		1
23	48 99 894	Hose clamp	NLS-USE 92152409	1
24	48 98 953	Fuel filter		1
24A	51 95 508	·Reservoir		1
24B	93 185 604	·Filter insert	(90 542 912), NLS-USE 95507489	1
24C	51 95 524	·Cover		1
24D	51 95 532	·Screw		1
24E	51 95 540	·Screw		1
24F	51 95 557	·Spring		1
25	48 99 951	Fuel pump	(4672341), NLS-USE 5324850	1
25A	400 128 823	·Strainer		1
25B	400 128 831	·Sleeve		1
26	47 27 764	Hose clamp		1
27	42 35 768	Rubber spacer	NLS-USE 9281374	1
28	79 77 929	Nut	NLS-USE 11900451	2
29	95 44 248	Hose Note: Ch. --12051712 Ch. --17017591	(47 73 347), NLS-USE 5342860	X
30	95 44 271	Distributor	(47 73 362), NLS-USE 9281478	1