


Anti-roll bar bush


To remove

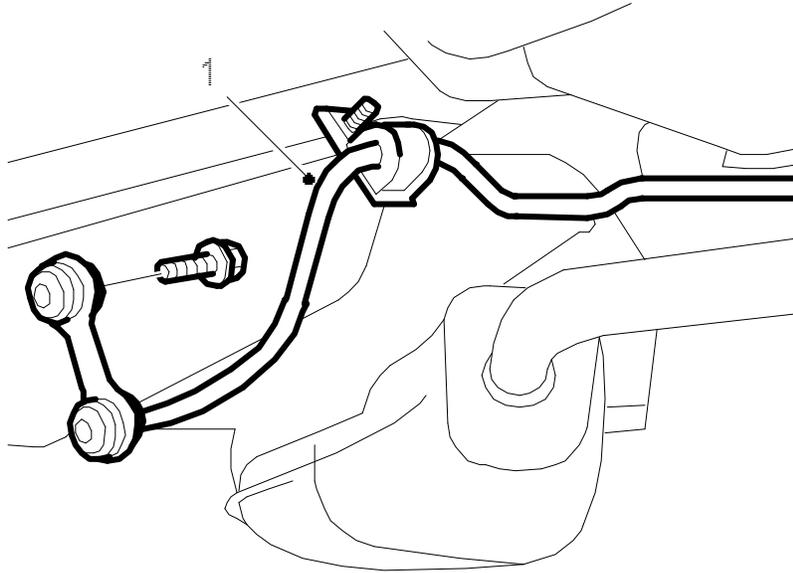

E 732R055


1. Remove the anti-roll bar.
- 2.

Tap out the clamp's screw.

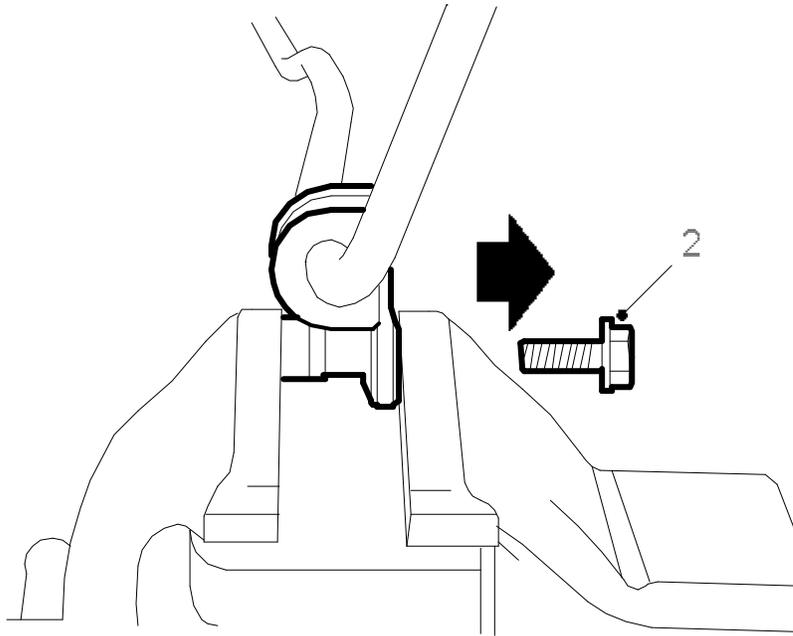


E732R056

3. Dismantle the clamp and remove the bush.

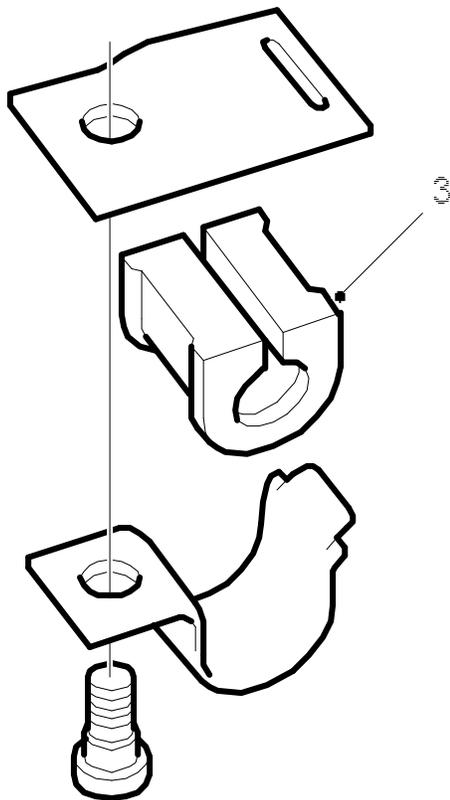


E732R057

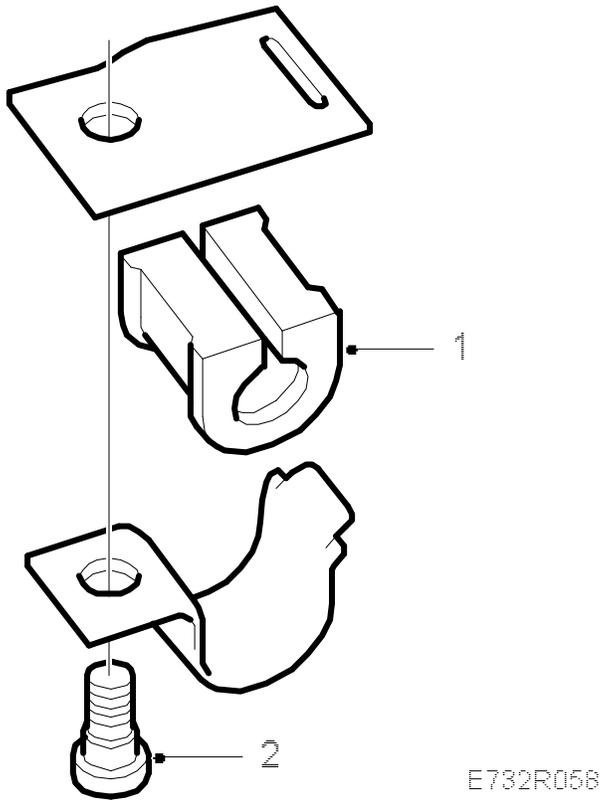To fit

1. Lubricate the bush with Molycote 33, fit it in place and mount the clamp.
2. Tap in the clamp's bolt.
- 3.

Fit the anti-roll bar.

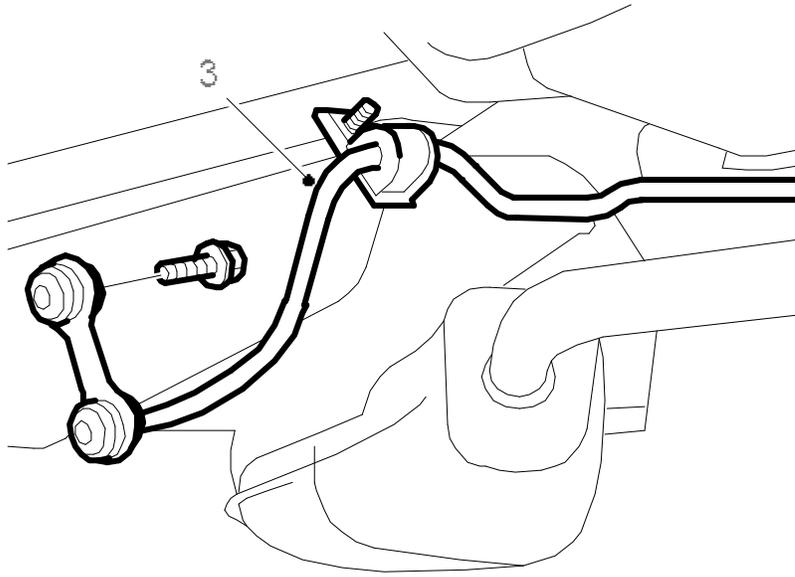

E732R059